

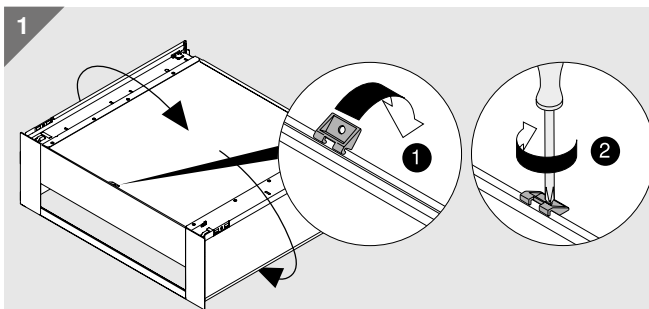
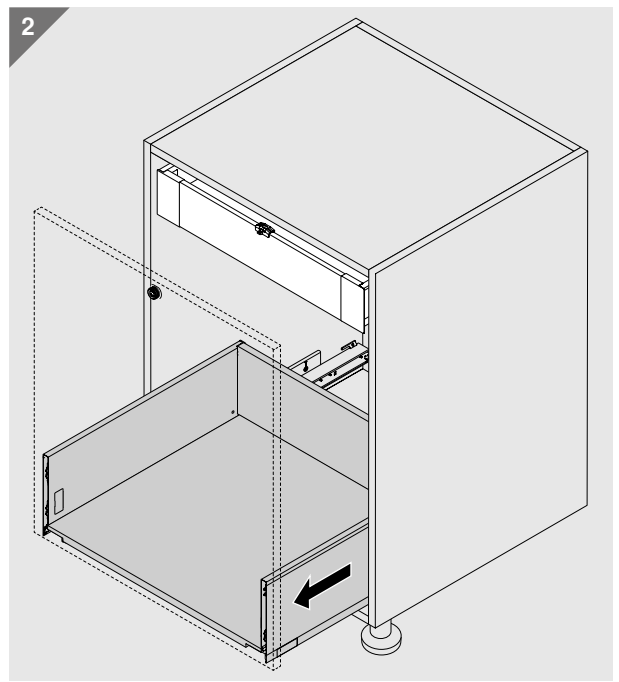
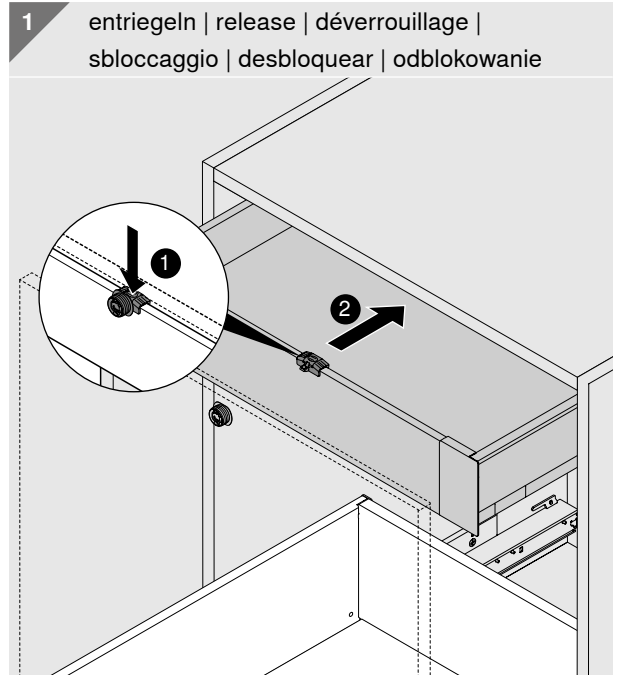


mittig platzieren | centre mount | center | posizionare al centro |  
colocación centrada | osadzony środkowo

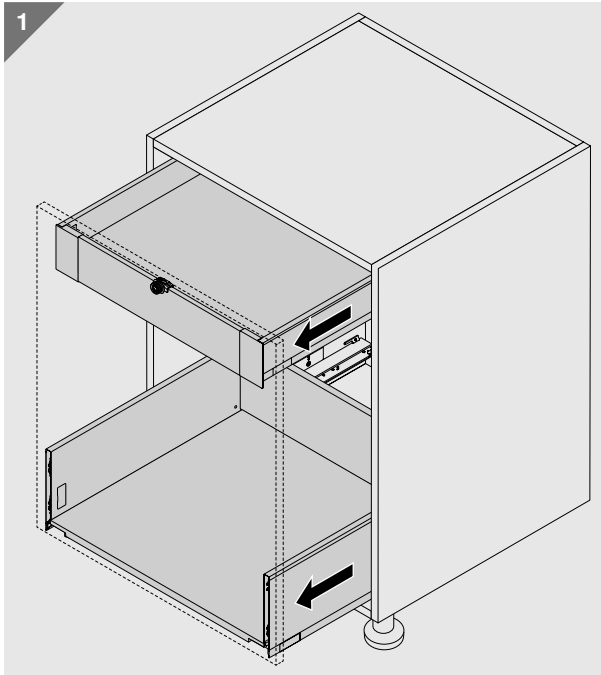

Ab Korpusbreite 600 | Starting with cabinet width 600 | À partir d'une largeur de corps de meuble de 600 |  
 A partire da una larghezza del corpo mobile 600 | A partir de un ancho cuerpo de mueble de 600 | Od szerokości korpusu 600 mm

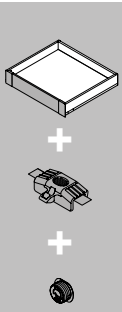